

# KINETROL SPRING DIRECTION OF ROTATION & ORDERING CODES

Kinetrol spring units are available for retro fitting on Kinetrol actuators and are available with either clockwise or anticlockwise spring action.

The spring action direction is always determined by looking at the top of the assembly down towards the valve/application.


The ordering suffixes are listed below:

- 020 = clockwise spring action
- 030 = anticlockwise spring action


To order a female spring simply place an 'F' in front of the above suffix, for example 094-020 becomes 093F020 for a female clockwise spring, 097-030 becomes 097F030 for a female anticlockwise spring.

**DUE TO THE FACT THAT NEW TYPE CODING WHICH INCLUDES A 3,4, OR 7 IN THE ACTUATOR THIRD DIGIT OF THE CODING (e.g. 073-100, 074-100 or 077-100), SPRING UNITS ARE ALWAYS FITTED BENEATH THE ACTUATOR. THIS MEANS THAT THE VIEWING OF THE SPRING UNIT WITHOUT ACTUATOR WILL BE SEEN IN THE SAME DIRECTION (i.e. 073F020 is the same spring as 073F120) SEE DIAGRAMS BELOW FOR DIRECTIONS:**

### SPRINGS WITH ACTUATORS

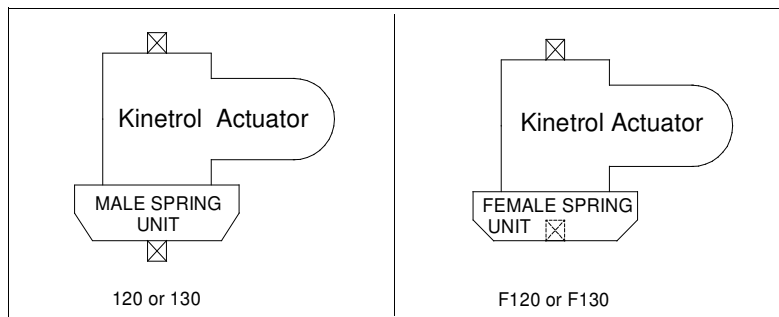

### MALE SPRINGS & FEMALE SPRINGS

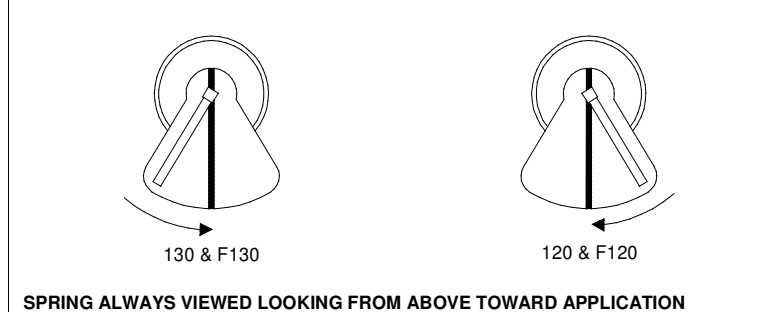

### SPRINGS WITHOUT ACTUATORS - MALE & FEMALE

